## For Style 1103P16-10 Assembly Instruction Sheet #IS-1103P16-10

Yourse: (10) 128V LED \*128V DIMAASILE (4000K)
shed Assembly Time: 20-30 minutes
Stont Identity and Issembly rdiver, pilem, wire culture, wire strippers, electrical tape, safety glasses

ration: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are it. If any parts are missing or damaged, do not ettempt to assemble, install, or operats the ficture. Contact customer service for replacement

## Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.
These instructions are provided for your eafety. It is very important you read them completely before installing the fidure.
We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect firture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

Package Contents A. Pase the supply whee through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box. STEP 2 - Attach Mounting bracket to Outlet Box th the head of the Green Ground Screw facing you.

A Fixture Body \*1

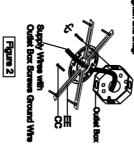

П

are Contents

STEP 3 — Fit Calling Canopy to Mounting bracket As

nd Lock Weether and not, adjust the length of the ounting Screws (DD) by an acrowing Mounting rewa (DD) in or out of the ng the Hex Nu and the Cap nut (AA).

8

A. Line up a set of holes on the

braclest (EE) and Hole

tend fighten until anug uts onto the Mounting

Figure 1

Figure 3

nting bracket (EE). Pas ed Mounting Screws (DD)

ns and thread He

and Hex Nuts to Mounting bracks

STEP 1 - Attach Mounting Screws, Lock Washers

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Cap nut (AA). Note: The ceiling canopy should A. Use standard wire connectors to make all wire connections.

Twist connectors until wires are tightly joined together. Wrap
each connection with approved electrical tape and carefully
stuff all the connected wires into the Outlet Box. Black wire from outlet box (or Red) Ground wire from outlet box from outlet box Bare, or Green Bere, or Green from outlet box **Ground wire** White wire Figure 4 on the Crossbar Green Ground Screw Black wire from foture White wire from focure from fodure from fluture Ground whe

Figure 5

A. Carefully tuck all wires into the outlet box and por STEP 6 — Install Ceiling Canopy to Ceilin ceiling canopy of the Foture Body (A) over the outlet box.
Align the holes in the coiling canopy with the Mounting
Screwe (DD). Secure with Mounting Balls (AA) and hand

STEP 4 - Wire Conne