

For Style 1143P16 Assembly Instruction Sheet #S-1143P16

Baquired: Flathead screwitiver, Philips screwitiver, pilers, who callies, who shippers, electrical tops, safely glasses.
 Equiver: (1) E26 Base Bub 90W Maximum(Not Include).
 It sources: (2) E36 Base Bub 90W Maximum(Not Include).
 It shallow Assembly Time: (1-20 Include) and include are partially and included and impact all parts are resident toward inspect all parts before beginning installation. Check package content but and diagrams below to be sure all parts are relative are missing or damaged, do not attempt to assemble, install, or operate the fidure. Context customer earwice for replacement.

⚠ Warmings and Cautions
Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricisn if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electricism perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

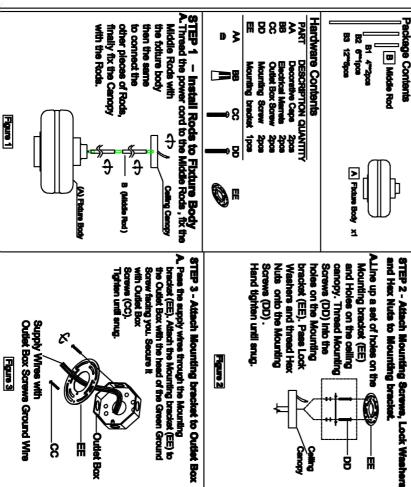

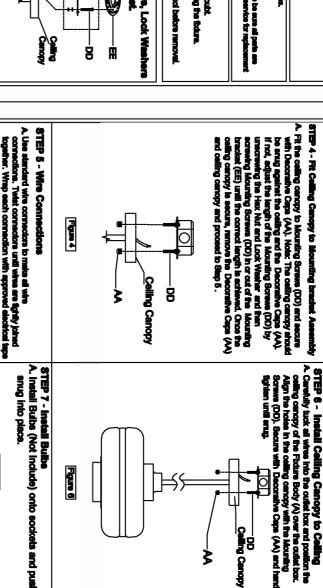

lling Canopy

⋛

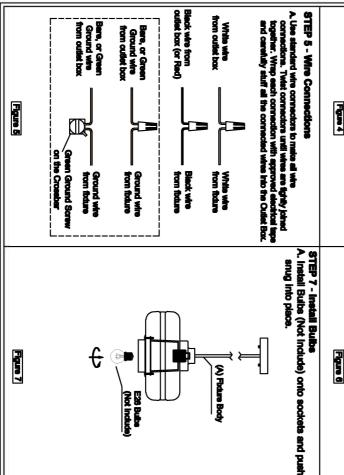

Outlet Box

8 Ĥ

2 of 2