


Tools Required: Plathand screed/ker, Phillips screed/ker, plices, vine culturs, who adopters, elactrical laps, salely glasses.
Light Sources: (1) 1207 LED 11W DIMANALE (4000Q
Editabled Assessibly Thes: 15-50 minutes
Proposition: Gently and Import at parts before beginning installation. Check peckage content led and diagrams below to be sure at parts are
Proposition: Gently and Import at parts before beginning installation. Check peckage content led and diagrams below to be sure at parts are
Proposition: Clerky and Import at parts before beginning installation. Check peckage content led and diagrams below to be sure at parts are

These instructions are provided for your safety. It is very important you read them completely before installing the focure. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

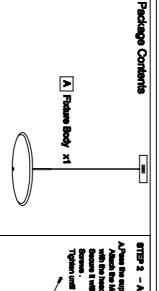



STEP 3 — Fit Bediplate to Mount! K **Outlet Box Screws Ground Wire** Supply Wires with Figure 2 ig bracket Ass m

Hardware Contents

TTTTT

A. Fit the becipies to Mounting Screwe (DD) and secure with Decorative Cape (AA). Note: The becipies should Ma Cape (M)

A. Line up a set of holes on the

H(EE) and Hotel

ed Mounting Screws (DD) ting bracket (EE). Pless Lock sers and thread Hox

and Hex Nuts to Mounting brack


STEP 1 - Attach Mounting Screws, Lock Washers


and Ceiling Canopy and proceed to Step 4 noe the Ceiling Carapy is cure, remove the g bracket (EE) until the angth is achieved. (DD) in or out of the

X Canopy


> A. Use elandard wire connectors to make all wire connections. Twist connectors until wires are lightly bined togethe Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Culiet Box. lack wire from from outlet box White wire White wire from fluture

STEP 4 - Wire Connections




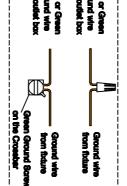

A-Carefully tuck all wires into the cullet box and position the Calling Canopy of the Fixture Body (A) over the cutlet box. Align the holes TEP 5 - Install Calling Canopy to Calling n the Ceiling Carrapy with the Mounting Screws (CC). rom outlet box **Ground wire** Ire, or Green Figure 4 Green Ground Screw

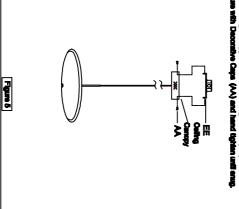

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the holes in the ceiling canopy with the Mounting Screws (DD). Secure with Decorative Cape (AA) and hand STEP 6 install Ceiling Canopy to Ceiling



ReleasedDate:2019-4-20