## Assembly Instruction Sheet #IS-1205P39 For Style 1205P39


» Required: Fathand acressitiver, Phillips acressitiver, plient, who culture, who athippers, electrical tops, safety glasses.
• Required: (27) GB LED Bub Mex SM (hot include).
• Researchly Time: 10-20 mixture
• Researchly Time: 10-20 mixture
• In the party party are missing or damaged, do not attempt to essentite, install, or operate the findure. Context customer service for replacement. If any party are missing or damaged, do not attempt to essentite, install, or operate the fixture. Context customer service for replacement.


AWarmings and Cautions


Tum off electricity at circuit breaker or main fuse box before installation. Consuit a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the focus. We strongly recommend that a licensed, profe


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

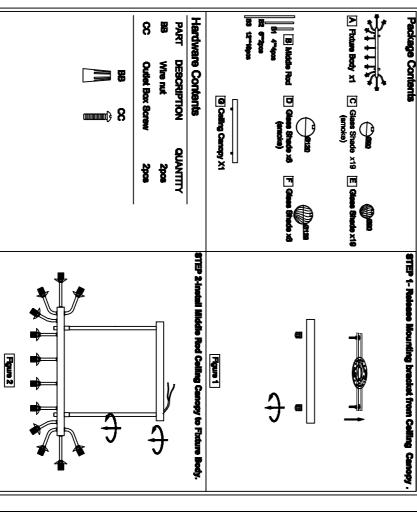

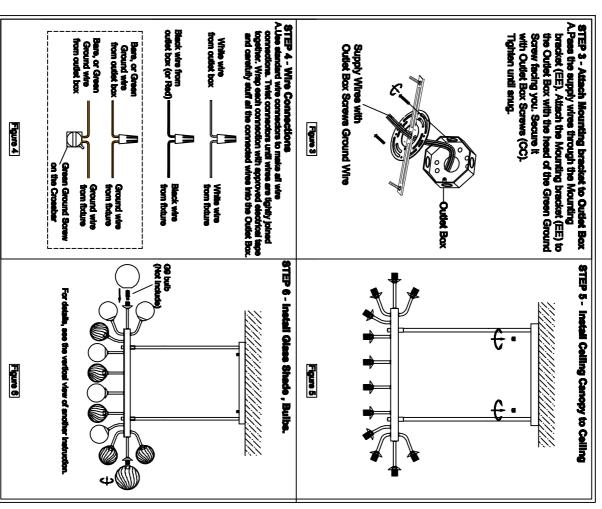

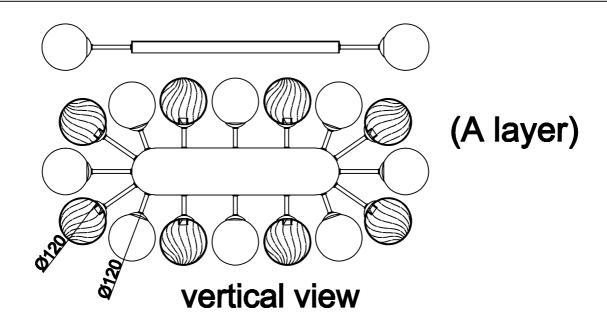

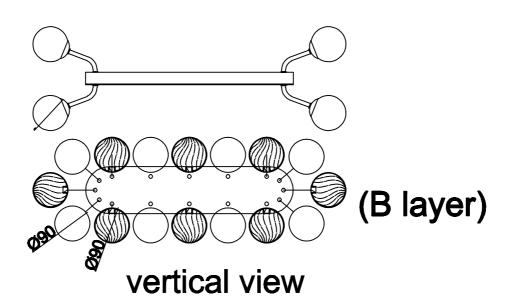

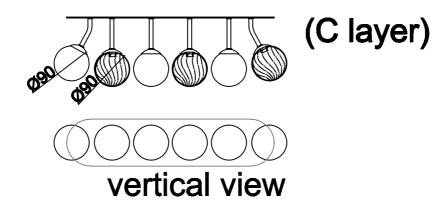

Attention:Smoky glass should shine 3 of 3